

INSTALLATION MANUAL

Install the Screen Maestro Box

Place the SCM Box between your existing set-top box (STB) and the display.
When finished, live TV should appear on the same screen as before.




Your package and the SCM Box. Scan the package QR code anytime to reopen this guide.

1. Before you start

- Working STB already on site (SBB D3, SBB EON, Telekom Iris, or similar)
- Display currently connected to that STB
- Free LAN / Ethernet port for the SCM Box
- Power outlet for the SCM Box adapter

Important: Set the STB HDMI output to **1080p at 50 Hz or 60 Hz** before or during install. Other resolutions may fail to display correctly.

2. Package contents

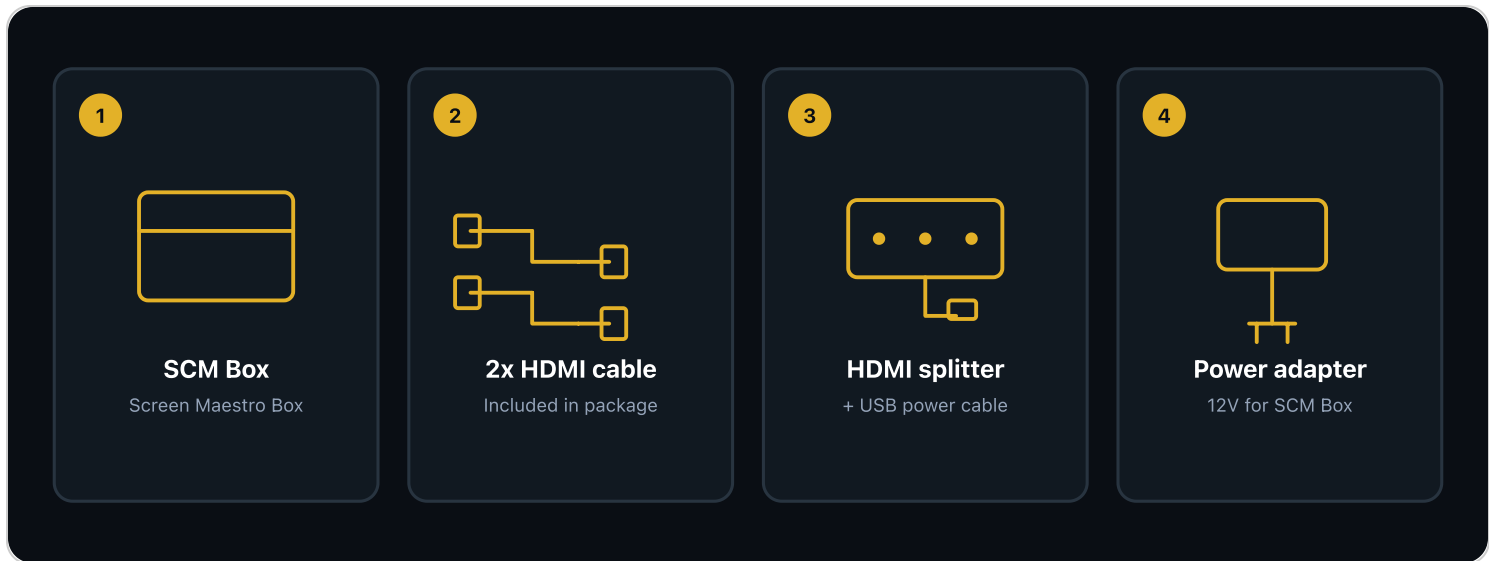


- **SCM Box** — Screen Maestro Box
- **2x HDMI cable**
- **HDMI splitter** with USB cable for power
- **Power adapter** for the SCM Box



SCM Box front — USB ports for splitter power are here.

3. Connection overview

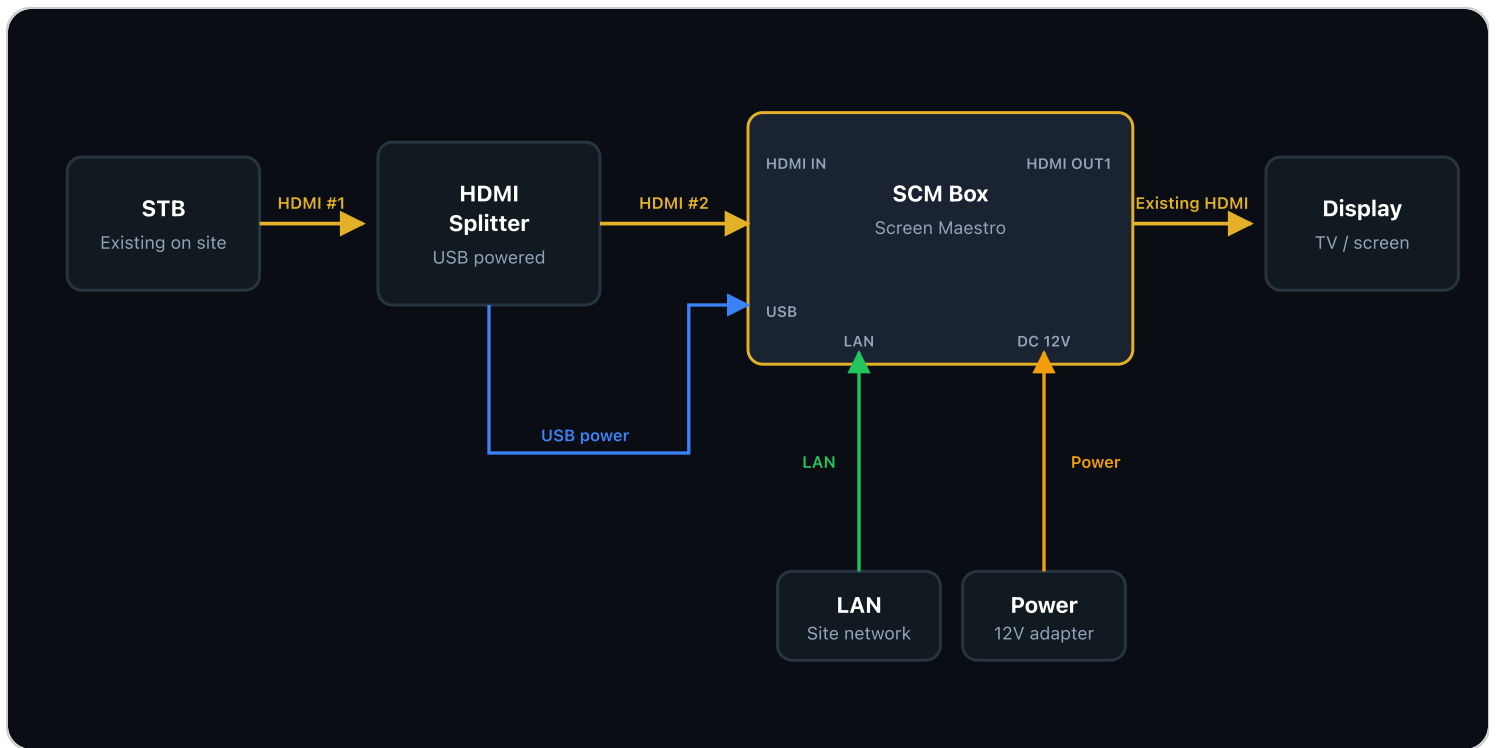

Signal path: STB → HDMI splitter → SCM Box → display. The splitter is powered from a USB port on the SCM Box. LAN and 12V power connect to the SCM Box.



Ports used in this install: HDMI IN, HDMI OUT1, LAN, USB (front), and DC 12V.

4. Installation steps

1 Keep the existing STB in place

Do not replace the STB. Screen Maestro works with the STB already at the site.

2 Disconnect the display HDMI from the STB

Unplug the HDMI cable that currently runs from the STB to the TV / display. Keep that cable — you will reuse it.

3 Connect package HDMI #1 between STB and splitter input

Use one new HDMI cable from the package: connect the STB HDMI output to the **input** of the HDMI splitter.

4 Connect package HDMI #2 from splitter to SCM Box

Use the second new HDMI cable: connect either splitter **output** to the SCM Box **HDMI IN**.

5 Power the splitter from the SCM Box

Plug the splitter USB power cable into any USB port on the SCM Box.

6 Connect the display to SCM Box HDMI OUT1

Take the HDMI cable you disconnected in step 2 and plug it into **HDMI OUT1** on the SCM Box (other end stays on the display).

7 Connect LAN

Plug a site Ethernet cable into the SCM Box LAN port.

8 Power the SCM Box

Connect the power adapter to a wall outlet, then to the SCM Box. Power on the device.

5. Verify

Live TV from the STB should appear on the display that was previously connected directly to the STB.

If there is no picture, confirm the STB is outputting **1080p @ 50 or 60 Hz**, check every HDMI end is fully seated, and confirm the splitter USB is powered from the SCM Box.

6. Dashboard access

Device monitoring uses the Screen Maestro dashboard (Dash). If you did not receive device dashboard login credentials, contact support@develomon.com.